

Restore RDS DB from snapshot



Task-1

Explore snapshot options (Restore ss , Copy ss , Share ss , Upgrade ss ,export to Amazone S3)

Task-2


Create RDS primary ,upgrade records ,create replica from primary and test sync write process where data replication or not.

Make some changes to primary DB .

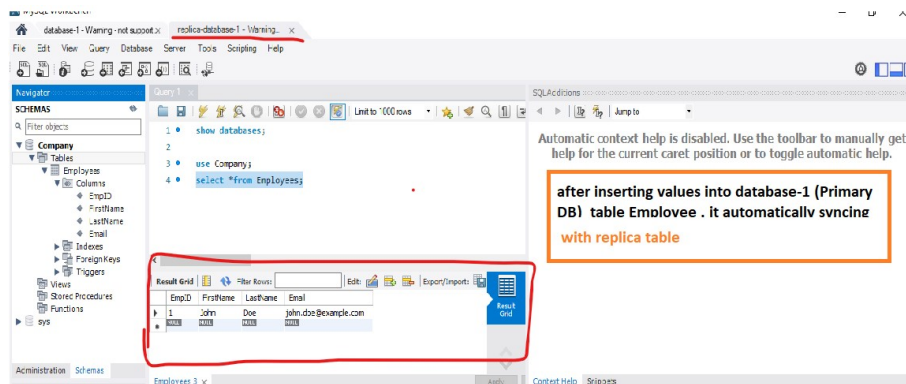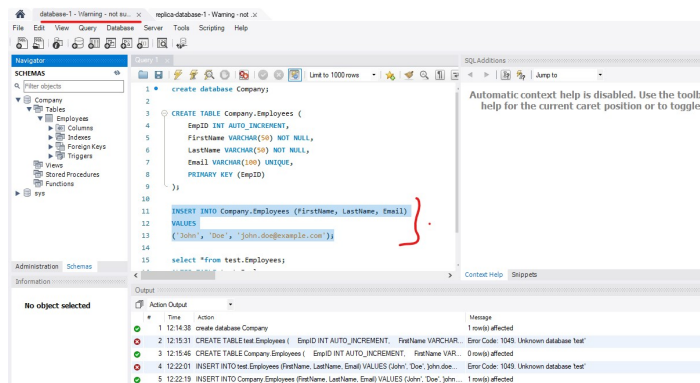

Task-3


Try to write the data into read replica (create db, table ,insert) .

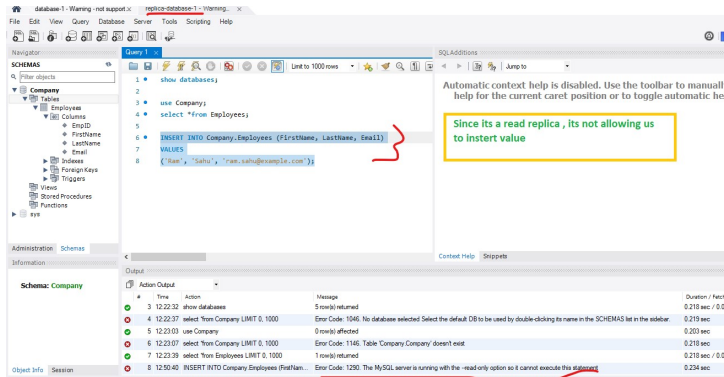


Task-4

Delete master and try again task -3(inserting values into replica database).

Delete master DB

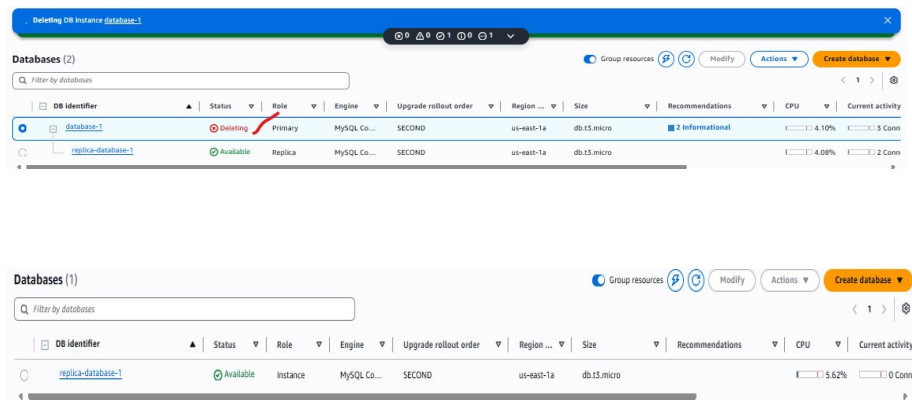

Try writing/insert to read replica

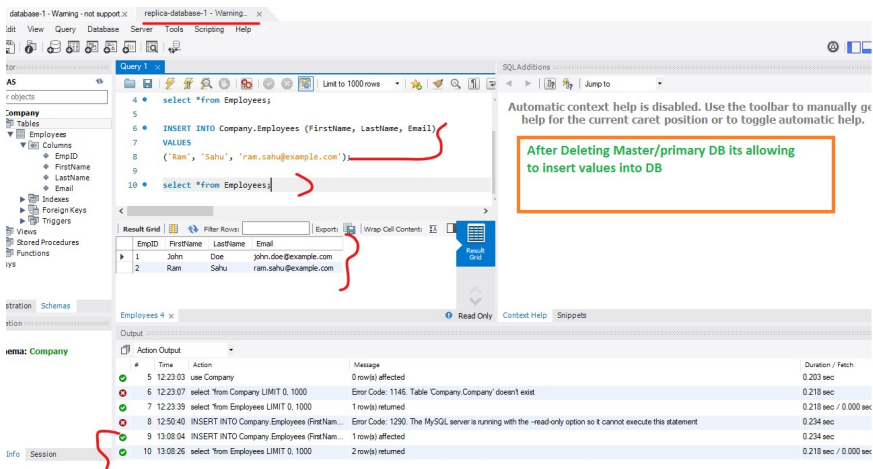

After delete primary DB ,reader replica act as stand alone DB not master

Task-5


Understand the difference between Standalone DB and Master DB.

Standalone DB vs Master DB (Important Points Only)	
Standalone DB	Master DB
Single database server	Primary database in a replication setup
Handles both Read and Write operations	Handles Write operations; Replicas handle most Read operations
No replication	Replicates data to Replica databases
Simple to set up and manage	More complex to configure and maintain
Lower cost	Higher cost (multiple servers)
Single point of failure	Better availability with Replicas
Best for small applications and development	Best for large-scale production applications
Limited scalability	Easy to scale by adding Replicas

Task – 6


Create a RDS database . add some tables and data into database .take snapshot . delete the primary database . then restore the database from the snapshot .

Create DB

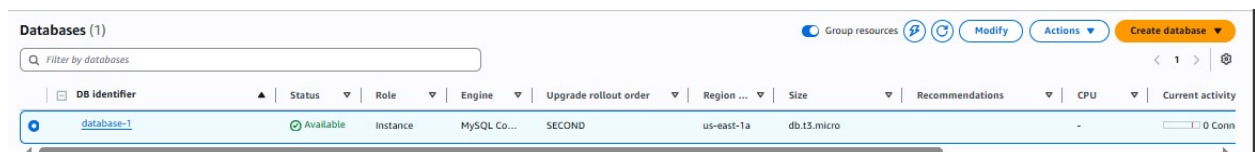



Databases (1)									
Filter by databases									
DB Identifier	Status	Role	Engine	Upgrade rollout order	Region ...	Size	Recommendations	CPU	Current activity
database-1	Available	Instance	MySQL Co...	SECOND	us-east-1a	db.t3.micro	-	-	0 Conn

Create replica

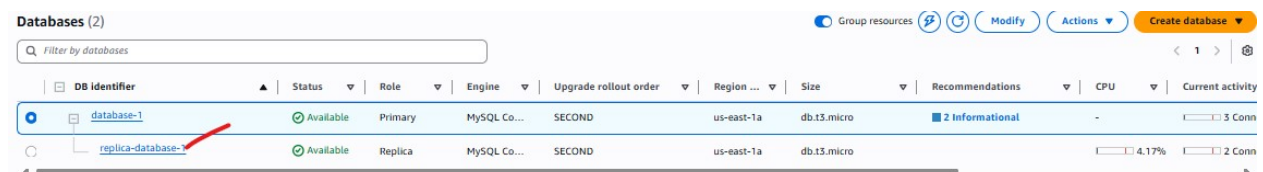


Databases (2)									
Filter by databases									
DB Identifier	Status	Role	Engine	Upgrade rollout order	Region ...	Size	Recommendations	CPU	Current activity
database-1	Available	Primary	MySQL Co...	SECOND	us-east-1a	db.t3.micro	2 Informational	-	3 Conn
replica-database-1	Available	Replica	MySQL Co...	SECOND	us-east-1a	db.t3.micro	-	4.17%	2 Conn


Take a snapshot

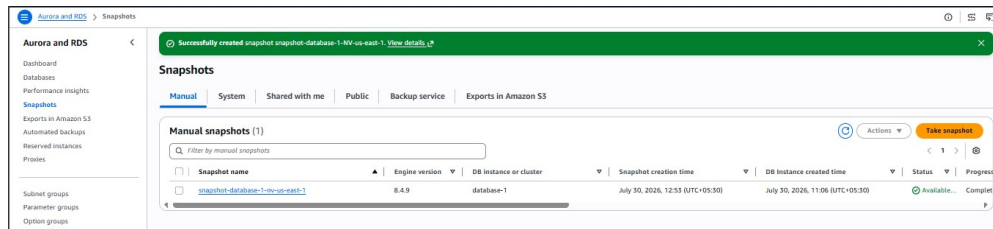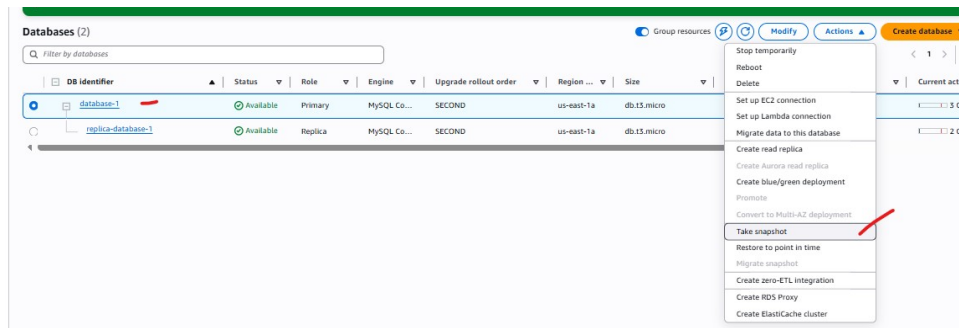


Delete master DB

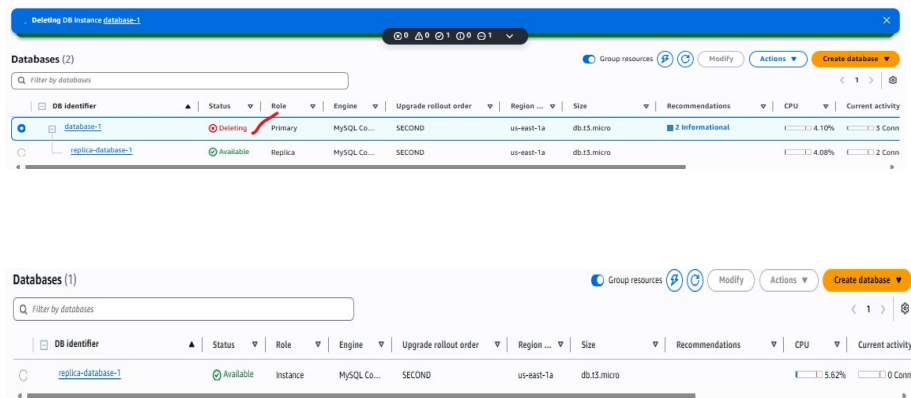


Now restore DB from snapshot(snapshot-database-1-nv-us-east-1).

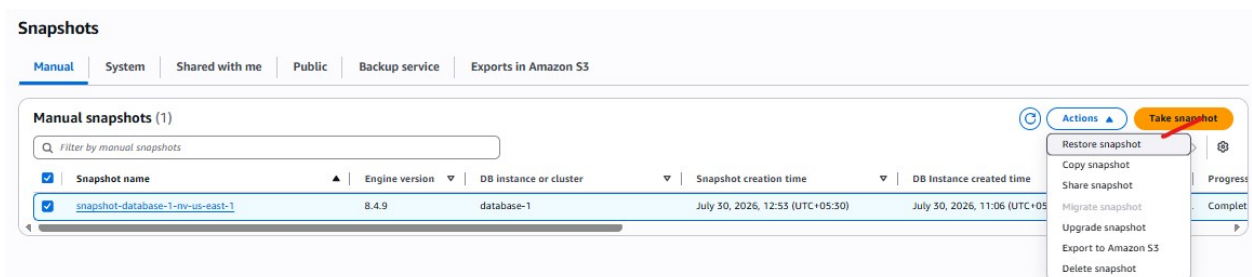

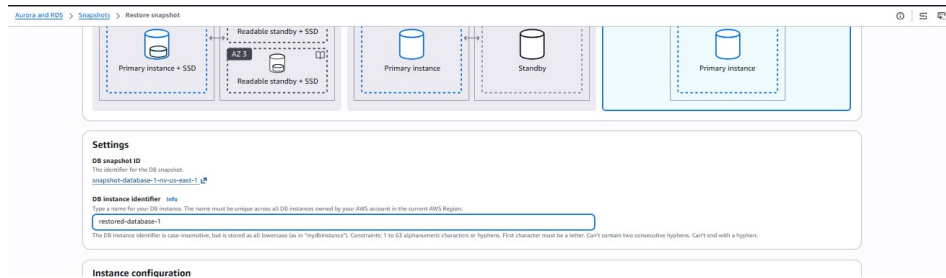


Click restore snapshot , it will take some time .

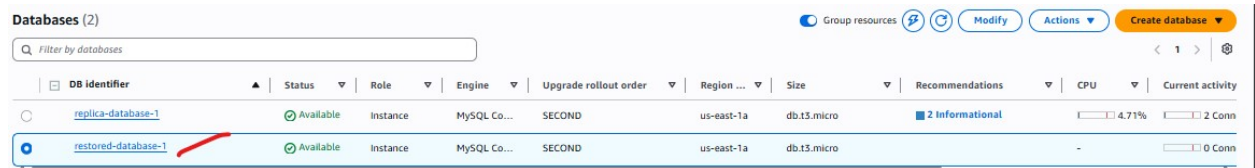


Now connect it with Mysql workbench to check.

Make sure your giving same username/admin/master of server .

Give the restored DB endpoint DNS.

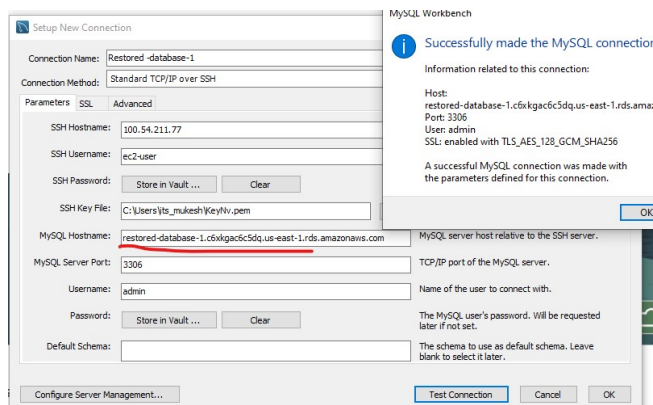

Now connect and check if there is any existing data from database-1.

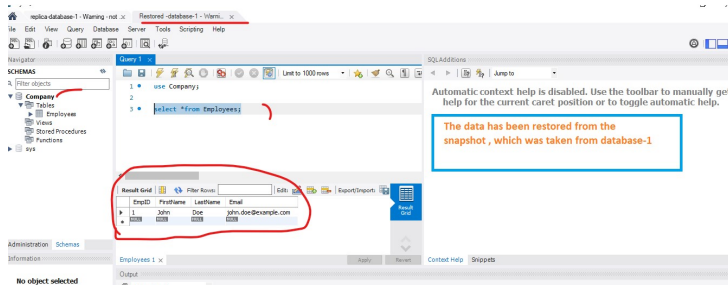

We can see database-1 data is there in the Company.Employees table.